



Quick Start Guide

Now TV strives to provide customers with high-quality TV entertainment. We offer a wide variety of programs from world-renowned TV channels alongside customer-friendly value-added services – all delivered from a reliable service platform.

With so much to choose from, we've made life easier. My Now, Watchlist, TV Guide, Personalized Recommendations and other features to help you discover programs you'll love, and enjoy more of what you want, when you want it.

This guide has important tips to help you the most out of the advanced features of your Now TV set top box.

First Time Activation Code:

Enter the first 4 digits of your Hong Kong ID/passport number

Please key in your activation code on screen to start your Now TV service.

User PIN:

0000 is the default PIN Number

This PIN can be used to subscribe to Now TV pay TV channels and certain other services as well as activate the Parental Control Lock on selected channels and program categories. Please do not disclose your PIN to prevent any unauthorized use. You are advised to change your PIN regularly for added security. Select HOME > SETTINGS > Change PIN

*Note: Subscription to Now TV service is subject to the Terms and Conditions of Now TV. Now TV service is provided by PCCW Media Limited and / or its affiliates in accordance with the Terms and Conditions of Now TV. For further details on the Terms and Conditions of Now TV, please refer to Now TV website (www.nowtv.now.com/terms-and-conditions) or access through TV select "Settings" and choose "Terms and Conditions".

TV GUIDE

The all new TV Guide makes channel surfing easy



Program Details
Shows marked "save" can be saved to view after their air-date. Use the "+" button to add the show to your Watchlist.

★ **Starred programs are recommended for you**

Change View

See All Channels, Favorites, Subscribed or channels by genre.

Set Favorite

Highlight the channel logo at left, then use the color button to mark as a favorite.

MY NOW

Your Watchlist, History and Personal Recommendations



Most Recent
Pick up where you last left off.

History
Quickly access programs and channels previously watched. (You may choose to turn off the History function in Settings.)

Personal Recommendations

Get introduced to content selected just for you.

WATCHLIST

The Watchlist helps you keep track of your favorite programs and shows. Use the "+" button or on screen selection to add programs to your list. Many TV shows and future episodes will be saved for you to watch later.

Unfortunately, some channel operators don't allow users to save their TV programs. For those shows, however, the Watchlist will still help you find other times to watch an upcoming episodes easily.

Remote Control



ON DEMAND

Watch movies and shows when you want



Unlimited Viewing
You are entitled to unlimited viewing of content from your channel subscription packages at no additional cost. Feel free to watch more!

Video Express First Rentals

You can also enjoy the very latest blockbusters on a pay-per-view basis. Get 48-hour unlimited viewing with Video Express First using either Now Dollars or cash.

WHILE WATCHING TV CHANNELS

These functions are available while watching television channels:

Info & Mini Guide

Press the Info Button to see the Mini-Guide and program details.

Coming Up

The right arrow button will show the channel's program line-up. Select a show to see more info.

Watchlist

Use the down arrow to show your Watchlist at the bottom of the screen.

History

Use the back button to show your History. Switch quickly between your most recent channels and shows. Channels will appear in your History after you've watched them for a few minutes.



When you want - Where you want! Free!

Enjoy more of your favorites on demand, anytime, anywhere. Control your set top box and Screen Cast from your phone or tablet. It's free!




Download Now Player for Android and iOS today. Visit nowplayer.now.com for more details and to register for free.



Video Background Setting

For customers with Fiber-to-the-Home broadband service, Now TV allows you to browse menus without leaving your television program. To adjust the brightness of the background video. Select HOME > SETTINGS > Video Settings > Background video.

Connection Diagram

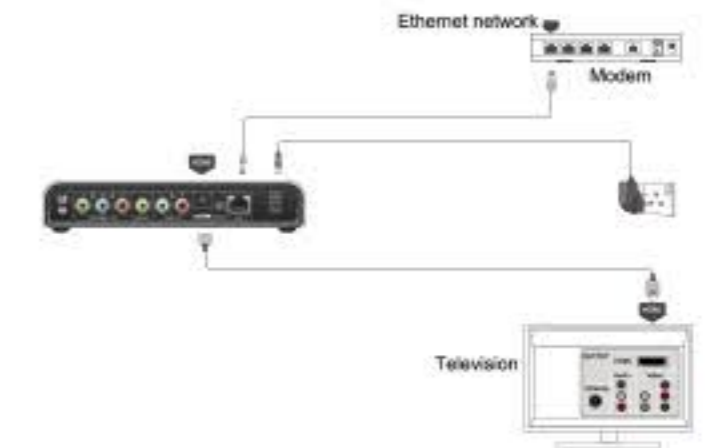

Trouble Shooting Table

Problem Encountered/ Error Code	What can you do?
Black screen/80061B	Step 1: Switch off the modem and set top box Step 2: Reconnect the broadband cable into the square socket of the modem Step 3: Unplug the power cord from the modem Step 4: Re-plug the modem power in 15 seconds; and wait for the lights to turn on. (around 2 - 3 minutes) Step 5: Reboot the set top box by pressing the Power button located at the front of your set top box
Frozen screen/80062A-H	Step 1: Switch off the modem and set top box Step 2: Switch on modem 15 seconds later, and wait for LED signal to become stable (around 2-3 minutes) Step 3: Restart the set top box
80061A	Step 1: Ensure your modem is switched on and the cable from modem to set top box is properly connected Step 2: Reboot your set top box by pressing the Power button located at the front of your set top box
80063	Step 1: Reboot your set top box by pressing the Power button located at the front of your set top box Step 2: Enter your service activation code. (First 4 digits of Registered customer's HQID/Passport number)

Video Tutorials
More tips and tricks available online at www.nowtv.now.com and in HOME > SETTINGS > Video Tutorials!

"If you have any enquiries regarding the service", please call Now TV Customer Service Hotline 1833 888 or email us at cs@nowtv.now.com for assistance.

PCCW Customer Service has launched a brand new Facebook page! Visit www.facebook.com/pccwcs, simply click "Like" to become our fan and enjoy the convenience of a one-stop direct-response PCCW customer service.

*Pictures for reference only.

For FAQ details, please refer to our website: www.nowtv.now.com. All content is subject to change without prior notice. Please refer to nowtv.now.com for the most updated user guide.